



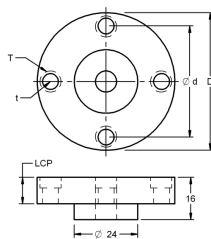


## IMN BCM INOX PA

### LEVEL MAGNETIC SWITCHES

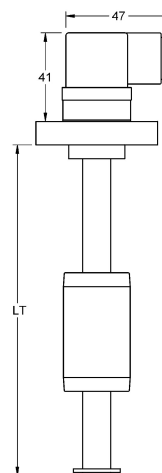

General	Operating principle	The IMN level magnetic sensors are based on the action of a reed switch located inside the tube, which is activated by a magnet housed inside the float and moves due to the thrust of the liquid.	
	Application	For detection of one or more level points: hydraulic groups, lubrication oil reservoirs, tank farms, etc.	
	Manufacturing	Are customized to conform to the conditions of the installation.	
Housing	Electrical connection	DIN43650 connector	
	Protection	IP 65	
	Temperature (Ta)	-20..+90 °C	
	Cable gland	PG 9	
	Ø Hose	6..8 mm	
Body	Guided tube and top stops	SS AISI316 (1.4401). Ø12 mm	
	Length	50..3500 mm	
	Temperature	-20..+80 °C	
	Mounting position	Vertical, ±15°	
Process connection	Flange	<b>BR52</b>	
	Material	SS AISI316 (1.4401)	
	n x t (mm)	4x6	
	T (mm)	8	
	Ø d (mm)	42	
	D (mm)	52	
	Thickness (LCP) (mm)	10	
Floats	Model	<b>FCPA07M14</b>	<b>FCPP04M14</b>
	Material	PA	PP
	Dimension (mm)	Ø 29x50	
	Pressure (kg/cm²)	3	
	Density (g/cm³)	e > 0,6	
	FS / FH (mm)	20 / 30	
			
Contacts	Nº of contacts	1..3	
	Class	NO: 120 WVA / 250 VAC-3A NC-NO/NC: 60 WVA / 230 VAC-1A	
	Distance between them	> 40 mm	
Protection	Standard	Normal execution without inner filling. Applicable to most applications.	
	Protegida	Anti-condensation effect. In installations where there are large temperature differentials.	
	Encapsulada	Filled with epoxy resin. Establishing a higher degree of tightness.	



## How to determine the sensor options

Determine the total length according to the characteristics of the shell and the liquid level to be controlled.

According to the maneuver you wish to perform, determine the amount, location and type of contacts.  
Use the table below to define these characteristics.

**Contacts:** To set the type of contact (NA, NC, NANC) should be without the presence of the float. For example, if you want the lower end of the sensor contact opens when the tank runs out of fluid, seek an NC contact for the position.

**Direction of action** (↑ ↓): Set the direction of action of the float (the filling or emptying) allows more precise adjustment of the position of the contacts to the point of desired performance.


**Electrical connection:** If not otherwise specified explicitly, provide a common connection to all the contacts and an active connection for each of them, according to the diagram below.

**Additional floats:** The sensor comes equipped by default with a single float, the lower stop and if required, the upper stop. Can request as many additional floats as many contacts as necessary.

**Conditions of work:** Check that the conditions of pressure, temperature and density of your system match those offered by the model chosen. If you have questions regarding the behavior of materials in contact with the liquid you want to control, see chemical resistance chart on our website.

Apart from the possibilities listed here, there are others such as other floats, various electrical connections, etc..

For other connectivity options and combination of floats and contacts, see our document "Connections for Switches Magnetic Level" you will find on the "Utilities / Tables" website.

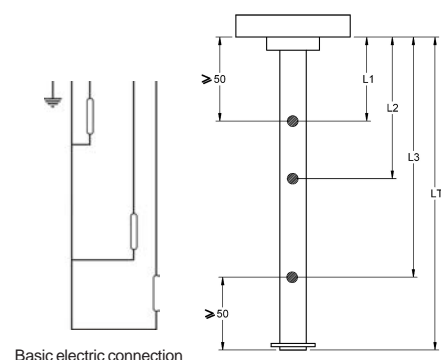

Basic electric connection

	mm	NO	NC	NANC	↑	↓	Stop
L1							
L2							
L3							
LT							

Use this document to define the data of the sensor and attach it at the moment of formalizing your order.

Specified in mm. the total length of the sensor.

Specified in mm. the position of each of the contacts will be used in your application.

Mark with an "X" type and meaning of performance of each contact.

Following references composition table check the boxes corresponding to the selected features.




REFERENCE	VERSION	PROCESS	FLOAT	TOTAL LENGTH	Nº CONTACTS	Nº FLOATS
IMN BCM INOX PA	<input type="checkbox"/> V1 Standard <input type="checkbox"/> V2 Protect <input type="checkbox"/> V3 Capsulated	<input type="checkbox"/> P40 BR52	<input type="checkbox"/> F55 FCPA07M14 <input type="checkbox"/> F51 FCPP04M14	L 50..3500 mm	<input type="checkbox"/> C1 1 contact <input type="checkbox"/> C2 2 contacts <input type="checkbox"/> C3 3 contacts	<input type="checkbox"/> N1 1 float <input type="checkbox"/> N2 2 floats

To compose a reference, select an option from each of the columns. Example: IMN BCM INOX PA V1 P40 F51 L500 C1 N1







Advice installation		Installation in areas with turbulence			
<p>If the tank is metal walls, the probe will separate from them at least 100 mm.</p>	<p>The maximum slope should be ±15°</p>	<p>Place the sensor as far as possible from areas of turbulence.</p>	<p>Still pipe. Protects the race of the float of the turbulence.</p>	<p>Separating wall or discouragement.</p>	<p>PSIA, DSIA relay: Differential control of max. and min. by timing.</p>

## ELECTRICAL CONNECTION EXAMPLES









1 CONTACT



2 CONTACTS









3 CONTACTS








## CONTROL TO ONE MAXIMUM OR MINIMUM LEVEL

1 CONTACT

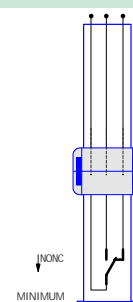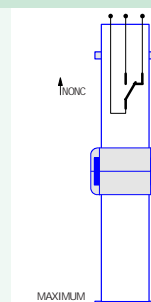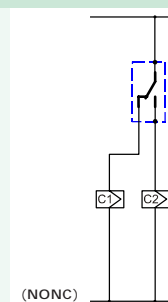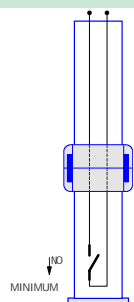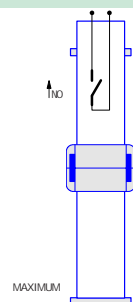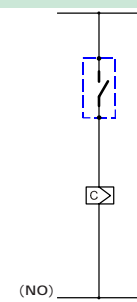




EXAMPLES TO APPLICATION

2 CONTACTS

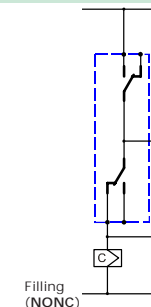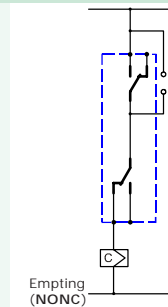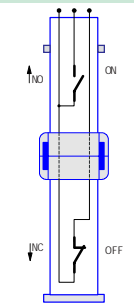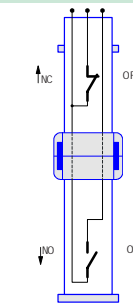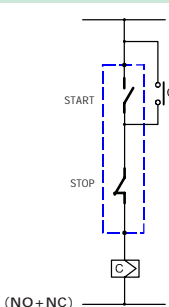

## START-STOP EMPTYING + ALARM TO MINIMUM LEVEL

3 CONTACTS

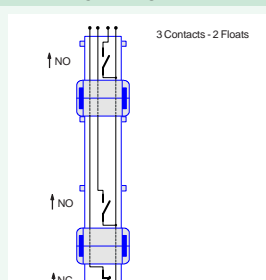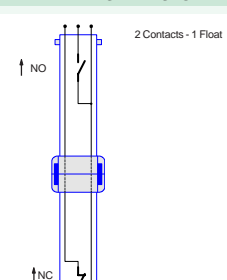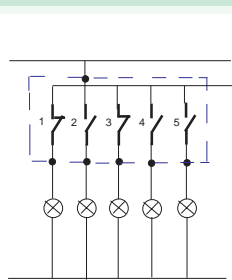

More related information in "Utilities / Tables" on our website (www.disibeint.com)