





Application	Membrane controller for level control of bulk solids, easy flow and at atmospheric pressure.			
Operating principle	The membrane must be exposed to the material to be controlled. As the material that enters the silo accumulates and covers the membrane, the pressure it exerts forces it to back off by pressing the mechanism that operates a switch. This switch is used to start or stop visual, acoustic signals or the loading and unloading mechanisms in silos and containers.			
Certificates				
Model	CNM 20 EX	CNM 20 EX B1	CNM 20 EX B5	
Product	Powder	Powder	Gas + Powder	
Certificate	ATEX II 1/3D Ex ta/tc IIIC	ATEX II 1/2D Ex ta/tc IIIC	ATEX II 2G Ex ib IIC T6	
(follows9	T63°C	T83°C	II 1/2D Ex ta/tb IIIC T83°C	
Technical data				
Product density	0.3 t/m³ .. 2.5 t/m³			
Operating pressure	Atmospheric			
Breach pressure	> 1 bar			
Cable entry	M20 x 1.5			
Model	CNM 20 EX	CNM 20 EX B1	CNM 20 EX B5	
Temperature	-20 °C .. +60 °C	-20 °C .. +80 °C	-20 °C .. +80 °C	
Protection	IP 65	IP 66	IP 66	
Electrical data				
Contact type				
Voltage				
Model	CNM 20 EX	CNM 20 EX B1	CNM 20 EX B5	
Breakout power	4 A / 250 V AC	4 A / 250 V AC	Uo < 30 V DC; Ii < 100 mA	
Remarks	In alternating voltage, consumption is understood as resistive load. For inductive or capacitive load reduce to 50%.			
Materials				
Membrane	Stainlee steel AISI304			
Hoop and screws	Stainlee steel AISI304			
Model	CNM 20 EX	CNM 20 EX B1	CNM 20 EX B5	
Body and cover	Polyester + GF	Aluminium	Aluminium	
Cable gland	Polyamide	Brass	Brass	
Weight	0.48 kg	0.95 kg	0.95 kg	
Start up				
Installation	Install the membrane switch with its gasket on one side of the tank and screw it tight with M6 screws and washers.			
Sensitivity	150 .. 2000 g, depending on model			
Sensitivity adjustment	By means of a regulation column nut. The factory setting is preset to medium sensitivity.			

## Electrical wiring

Electrical connection

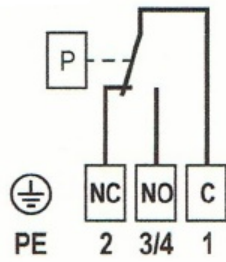

Ground connection

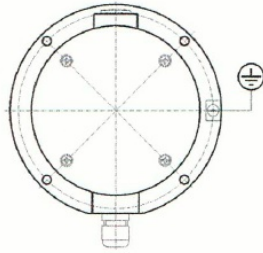

## Dimensions

