

IMNR BB INOX

MAGNETIC LEVEL SWITCH WITH MANEUVER CONTROL INCORPORATED








Application	Level control for general application in conductive liquids with preferred use in conductive tanks (see other possibilities in page 5).
Operating principle	The sensor uses the own process connection fitting as the common electrode and the rods for detecting the liquid contained into the tank where the level is to be controlled. The detection of that level provokes the action of a relay integrated into the sensor main body. A time can be set to delay the detection in tanks equiped with shakers or with turbulences. In order to adapt easily to the tank characteristics, it can be set the state of the contacts of the relay.
Operating mode	It depends on the number of contacts placed inside: With 1 contact: Detection of a only level point (amplifier KMPA). See page 2.

· With 2 contacts: Detection of max/min levels (amplifier KMCA). See page 3.

	Process connection	By flange (See table 1).
	Guide tube	SS AISI316 (1.4401), Ø12 mm.
	Length	903500 mm.
ō	Float	FEI601M13 (FEI-1), Ø52x52 mm.
Sensor		SS AISI316 (Other options according to table 2)
တိ	Nr max. of contacts	12
	Dist. between contacts	> 40 mm.
	Temperature	-40+125°C
	Mounting position	Vertical, ±30°
5	Material and dimensions	PBT. 64 x 95 x 110 mm
sin	Protection	IP67
Housing	Temperature	-20+50 °C
I	Cable gland	M20 x 1,5 (IP68)

	Туре	SPDT relay 6A/250VAC
	Response time	· At power on: 800 ms
		· At liquid detection: 500 ms
)	Timing	Adjustable between 09 s. It can be set when detec-
		ting, undetecting or at whichever of both situations.

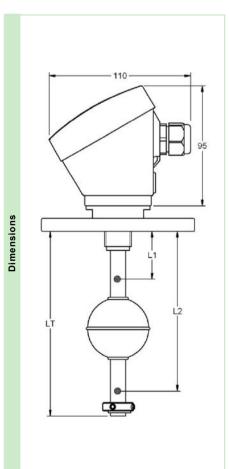

IMNR BB INOX 1C



1 Contact (Amplifier KMPA)

Control 1 level

Start-up and adjustment

Prior to start working with the sensor IMNR, it must be adjusted for getting a right operation. Adjustments can be modified whenever required. It must be taken into account that the behaviour of the device can be different whether the adjustments are done while the electrodes are in touch or not with the liquid.

Be sure that the options selector is right positioned. Each time that it is moved to a new option, the P led flashes twice indicating that the option has been correctly reached.

Default values



The sensor is adjusted by default with values that can be used in a large number of applications. When pressing the push-button PROG the led ② turns on. Keep the push-button pressed until the led ② turns off (3 seconds), indicating that the default values have been reset (they are framed with \square at the left column).

State of the relay contacts



(Relay NO ($_$ __): led @ OFF; Relay NC ($_$ _L): led @ ON). When accessing to this option, the led @ shows the actual state of the adjustment. Each time the push-button PROG is pressed, it is reversed the state of the relay contacts.

WARNING: This option modifies the state of the relay and this could provoke undesired effects in the case that any device be connected to the contacts of the relay.

Timing type



(Detecting (\nearrow): led P OFF; Undetecting (\nearrow): led P OFF; Detecting and undetecting (\nearrow): led P flashing). When accessing to this option, the led P shows the actual state of the adjustment. Each time the push-button PROG is pressed, it is moved to the next timing type in a cyclic way.

Time



1s


When accessing to this option, the led P emits as many flashes as the number of seconds adjusted in the timer, between 0 and 9 seconds. Each time the push-button PROG is pressed, the time value increases in 1 second, except when the value is 9 that moves to 0.

If it is pressed longer than 3 seconds, the time value moves to 0.

Run




Normal operation mode.

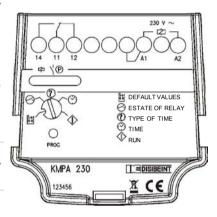

Assembly conditions

<u>Handling</u>: Do not use the housing to screw the sensor into the fitting. Use a tool 40 mm wide at the steel part on the thread. Once tighted, you can turn the housing 350° with your hand until it be placed in the right position.

<u>Electrical connection</u>: Use a cable according with the load the relay will manage. It is convenient that the cable gland completely tight the cable of the electrical connection, and it becomes essential in the event of humidity or when installed outdoor. In these cases, make a loop in the cable to facilitate the removal of accumulated drops (see figure).

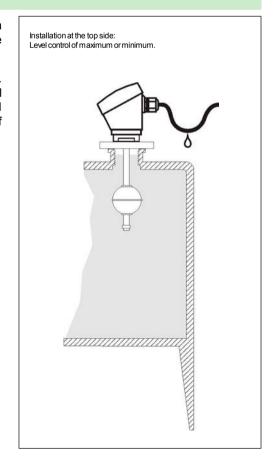

IMNR BB INOX 2C



2 Contacts (Amplifier *KMCA*)

Max./Min. Level control

Start-up and adjustment

Prior to start working with the sensor IMNR, it must be adjusted for getting a right operation. Adjustments can be modified whenever required. It must be taken into account that the behaviour of the device can be different whether the adjustments are done while the electrodes are in touch or not with the liquid.

Be sure that the options selector is right positioned. Each time that it is moved to a new option, the P led flashes twice indicating that the option has been correctly reached.

State of the relay contacts



(Relay NO (\searrow): led P OFF; Relay NC (\searrow): led P ON). When accessing to this option, the led \grave{e} shows the actual state of the adjustment. Each time the push-button PROG is pressed, it is reversed the state of the relay contacts.


WARNING: This option modifies the state of the relay and this could provoke undesired effects in the case that any device be connected to the contacts of the relay.

Run



Normal operation mode.


The state of the led (P) matches with the state of the relay contact (led ON = relay ON).

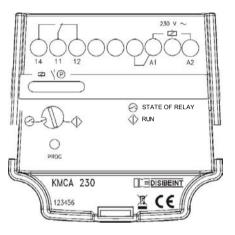

Assembly conditions

<u>Handling</u>: Do not use the housing to screw the sensor into the fitting. Use a tool 40 mm wide at the steel part on the thread. Once tighted, you can turn the housing 350° with your hand until it be placed in the right position.

<u>Electrical connection</u>: Use a cable according with the load the relay will manage. It is convenient that the cable gland completely tight the cable of the electrical connection, and it becomes essential in the event of humidity or when installed outdoor. In these cases, make a loop in the cable to facilitate the removal of accumulated drops (see figure).

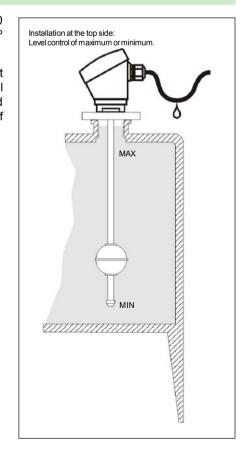

Model

Operating diagrams




IMNR BB INOX 1C


- · 1 Contact
- · Amplifier KMPA



IMNR BB INOX 2C


- · 2 Contacts
- · Amplifier KMCA

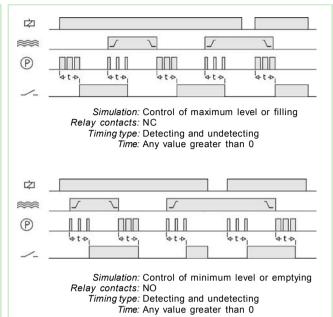

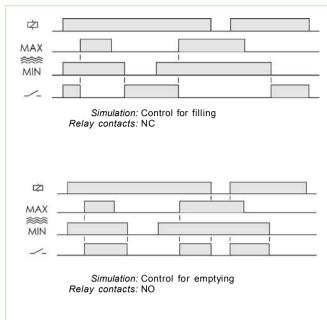



Example of wiring connection

Control of maximum level or filling control using a sensor with 1 contact and the amplifier KMPA.

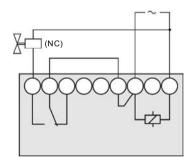


Filling control using a sensor with 2 contacts and the amplifier KMCA.

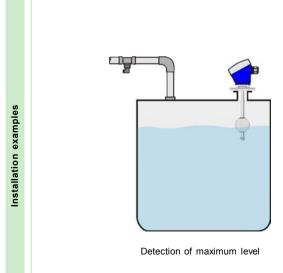

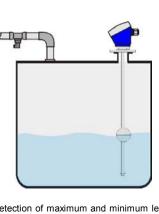

Detection of maximum and minimum level

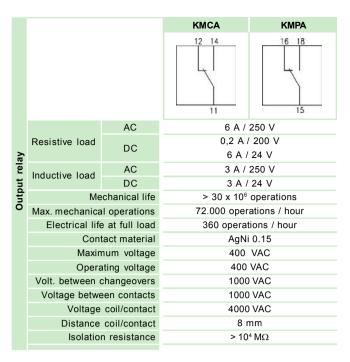

		KMCA/KMPA	
Supply voltage		A1	~ +
dn	Galvanic isolation	Yes	Yes
S	Frequency	50 / 60 Hz	-
	Operating margins	±1015%	-
	Positive	-	Terminal A1
	Protect polarity	-	Yes

KMCA/ KMPA Voltage phase-neutral 300 V Overvoltage category Ш Shocking voltage 4 kV Pollution degree 2 Constructive and enviromanetal data Protection class IP 20 Storing temperature -50..+85°C Operating temperature -20..+50°C Humidity 30..85% HR Housing Cycoloy - Light Grey Socket Lexan - Light Grey Lexan - Transparent Leds window Technyl - Dark Blue Buttons and terminal blocks Terminals Nickled brass Norms Designed and manufactured under EEC standards. Directive for electromagnetic compatibility 2004/108/EEC. Directive for low voltage 2006/95/EEC. Plastics: UL 91 V0

Table 1: Process connection

Flange	BR120	
Material	PVC	
n x t (mm)	4x12	
Ø d (mm)	100	10 01000
D (mm)	120	
Thickness (LCP)	10	


Table 2: Floats

Model	FEI601M13	FEI602M13	FCI602M13
Material	S	S AISI316L (1.440	4)
Dimension (mm)	Ø 52x52	Ø 95x95	Ø 44x63
Pressure (kg/cm ²)	3	0	15
Density (g/cm³)	e > 0,76	e > 0,36	e > 0,75
FS/FH (mm)	12,5 / 39,5	60,8 / 32,4	15,8 / 47,2
- FS FH	0		

Table 3: Protection

Standard	Normal construction, without any internal filling.
Protected	Filled with anticondensation gel.
Insulated	Filled with epoxy resine, flexible.

Ordering code

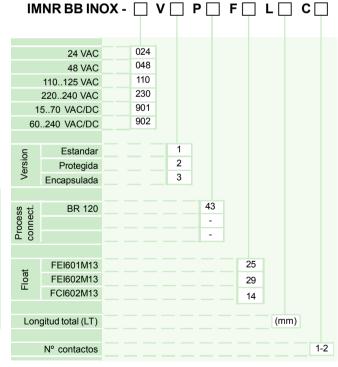

To compose the reference, select an option from each of the boxes. To manufacture the sensor must specify the height of each of the contacts L1/L2 (see dimensions on page 1).

IMNR BB INOX 048 V1 P43 F14 L500 C2 - L1: 150 L2: 430

 $Rev.\,01/00\cdot 26/06/12\cdot DISIBEINT\ reserves\ the\ right\ to\ alter\ the\ content\ of\ this\ document\ without\ previous\ notice$









T: +34 934 330 370 F: +34 934 354 532

