DISIBEINT

NCVR CB INOX / NCVRI CB INOX



REFERENCE		PROCESS CONNECTION			SUPPLY VOLTAGE			ELECTRODE							
								024	24 VAC						
NCVR	Level sensor				Ota inte e a			048	48 VAC						
		СВ	DIN		Stainless steel	P43	2"G	110	110125 VAC	2 E	2 Electrodes			1000	1000 mm
	Level sensor	CB	flange	· ·	AISI316	F4J	20	230	220240 VAC	3 E	3 Electrodes	_		1000	1000 11111
NCVRI	(electrode							901	1570 VAC/DC			T	PTFE PE		
	isolated)							902	60240 VAC/DC			-			

To compose a reference, select one option of each column. Example: NCVR CBI P43 024 2E L1000

NCVR CB INO	Start-up and adjustment			
2 Electroo 1 level con	Prior to start working with the sensor NCPR, it must be adjusted for getting a right operation. Adjustments can be modified whenever required. It must be taken into account that the behaviour of the device can be different whether the adjustments are done while the electrodes are in touch or not with the liquid. Be sure that the options selector is right positioned. Each time that it is moved to a new option, the (P) led flashes twice indicating that the option has been correctly reached.			
Default values	The sensor is adjusted by default with values that can be used in a large number of applications. When pressing the push-button PROG the led $@$ turns on. Keep the push-button pressed until the led $@$ turns off (3 seconds), indicating that the default values have been reset (they are framed with \square at the left column).			
Sensitivity adjustment	When accessing to this option, the led $①$ emits as many flashes as the adjusted sensitivity value, between 0 and 9. Each time the push-button PROG is pressed, the sensitivity value increases in 1, except when the value is 9 that moves to 0. If it is pressed longer than 3 seconds, the sensitivity value moves to 0. See the table "Sensitivity ranges" at the first page to relate each digit with its ohmic value.			
State of the relay contacts	 (Relay NO (): led O OFF; Relay NC (): led O ON). When accessing to this option, the led O shows the actual state of the adjustment. Each time the push-button PROG is pressed, it is reversed the state of the relay contacts. WARNING: This option modifies the state of the relay and this could provoke undesired effects in the case that any device be connected to the contacts of the relay. 			
	(Detecting (\checkmark): led (\bigcirc OFF; Undetecting (\frown): led (\bigcirc OFF; Detecting and undetecting (\frown): led (\bigcirc flashing). When accessing to this option, the led (\bigcirc shows the actual state of the adjustment. Each time the push-button PROG is pressed, it is moved to the next timing type in a cyclic way.			
Time	When accessing to this option, the led (P) emits as many flashes as the number of seconds adjusted in the timer, between 0 and 9 seconds. Each time the push-button PROG is pressed, the time value increases in 1 second, except when the value is 9 that moves to 0. If it is pressed longer than 3 seconds, the time value moves to 0.			
Run	Normal operation mode. The state of the led P matches with the state of the relay contact (led ON = relay ON).			


Assembly conditions

<u>Electrodes</u>: The electrodes can be cut to reach the required detection height. Because the detection point is unique, it is recommended to cut them at the same length. During the cutting process, be careful in preserving the housing of mechanical stress that may damage the binding of the electrode with the electronic circuitry.

<u>Mounting position</u>: The sensor can be mounted in any position. In the case of mounting at the tank side, it is suggested to use the model NCVRI with isolated electrodes, that will prevent an undesired communication through the deposition of liquid on the electrodes. In the same way, if the rods are very large (more than 1 meter, usually), it is recommended to use the separator NR.SEP/P to keep the electrodes isolated while the liquid is not in contact with them.

<u>Handling</u>: Do not hold the sensor by the housing while installing, do it by the flange. Once the holding clamp has been placed to fit the flange, you can turn the housing 350° with your hand until it be placed in the right position.

<u>Electrical connection</u>: Use a cable according with the load the relay will manage. It is convenient that the cable gland completely tight the cable of the electrical connection, and it becomes essential in the event of humidity or when installed outdoor. In these cases, make a loop in the cable to facilitate the removal of accumulated drops (see figure).

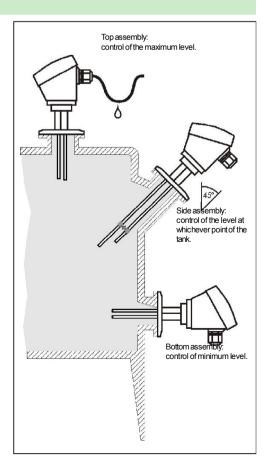

		3/5						
NCVR CB INOX		Start-up and adjustment						
		Before to start-up the sensor NCVR it must be adjuste to get a right operation.						
		Adjustments can be modified whenever needed. Must be tanken into account that the sensor						
3 Elec	trodes	behaviour can change whether the adjustments are done while the electrodes are in contact						
45		with the liquid or not.						
Ma	v / Min	Be sure that the options selector is right positioned. Each time it is moved to a new option, the						
IVIa	x / Min	led D flashes twice indicating that this option has been correctly reached.						
iff								
Default values	Паа	The sensor is adjusted by default with values that can be used in a large number of applications.						
		When pressing the push-button PROG the led P turns on. Keep the push-button pressed until						
		the led $@$ turns off (3 seconds), indicating that the default values have been reset (they are						
		framed with \square at the left column).						
Sensitivity		When accessing to this option, the led						
adjustment		value, between 0 and 9. Each time the push-button PROG is pressed, the sensitivity value						
aajaotmont	9	increases in 1, except when the value is 9 that moves to 0. If it is pressed longer than 3 seconds,						
	5	the sensitivity value moves to 0.						
		See the table "Sensitivity ranges" at the first page to relate each digit with its ohmic value.						
State of the (Relay NO (): led (P) OFF; Relay NC (_/_): led (P) ON). When accessing t								
relay contacts	A	led P shows the actual state of the adjustment. Each time the push-button PROG is pressed,						
rolay contacto	\bigcirc	it is reversed the state of the relay contacts.						
1		WARNING: This option modifies the state of the relay and this could provoke undesired effects						
		in the case that any device be connected to the contacts of the relay.						
Run		Normal operation mode.						
Kun	\triangle	The state of the led \mathbb{P} matches with the state of the relay contact (led ON = relay ON).						
	\sim							
		07 <u> </u>						
		KNCA 230						
		Assembly conditions						


electrodes output.

Electrodes: The electrodes can be cut to reach the required detection height. The common electrode must be the largest one and it is identified with the number "2" at the bottom side of the top screw (see figure). The electrode for minimum level must be equal or shorter than the common one. During the cutting process, be careful in preserving the housing of mechanical stress that may damage the binding of the electrode with the electronic circuitry.


Mounting position: The sensor can be mounted in any position. In the case of mounting at the tank side, it is suggested to use the model NCVRI with isolated electrodes, that will prevent an undesired communication through the deposition of liquid on the electrodes. In the same way, if the rods are very large (more than 1 meter, usually), it is recommended to use the separator NR.SEP/P to keep the electrodes isolated while the liquid is not in contact with them.


Handling: Do not hold the sensor by the housing while installing, do it by the flange. Once the holding clamp has been placed to fit the flange, you can turn the housing 350° with your hand until it be placed in the right position.

Electrical connection: Use a cable according with the load the relay will manage. It is convenient that the cable gland completely tight the cable of the electrical connection, and it becomes essential in the event of humidity or when installed outdoor. In these cases, make a loop in the cable to facilitate the removal of accumulated drops (see figure).

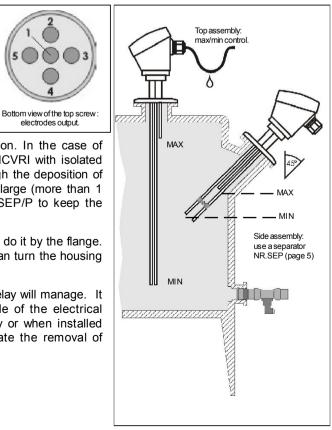

<u>- / -</u>

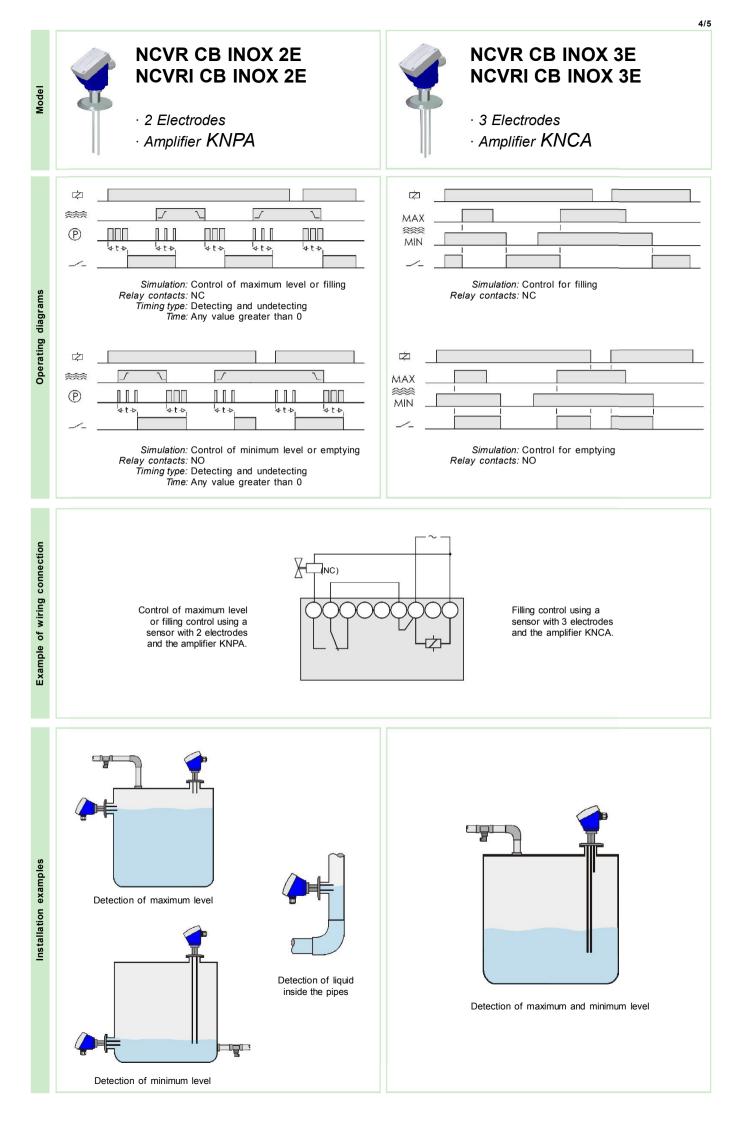

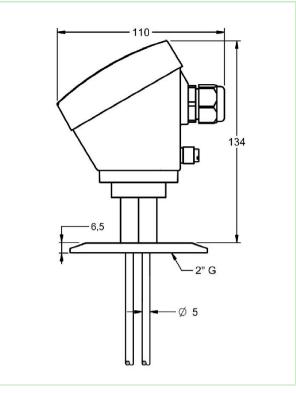

Dimensions

		PTFE	Poliolefine PE	
Insulation	Application	Electrodes protection against possible contacts among them.		
	Colour	Grey	White	
	External diameter (approx.)	6 mm	7 mm	
	Temperature	+70°C	+140°C	
	Models	NCPRI TB L	NCPRI TB T	

		NR.SEP/P	NR.SEP/T	
Accessories			317	
Acc	Application	Electrodes	separator	
	Material	PVC	PTFE	
	Colour	Red White		
	Electrode diameter	5 r	nm	

			KNCA	KNPA	
		AC	6 A / 250 V		
	Resistive load	DC	0,2 A / 200 V		
Output relay			6 A / 24 V		
	Inductive load	AC	3 A / 250 V		
		DC	3 A / 24 V		
		echanical life		operations	
,	Max. mechanica			ations / hour	
	Electrical life	e at full load	360 opera	tions / hour	
	Con	tact material	AgNi 0.15		
	Maxir	num voltage	400 VAC		
	Opera	ating voltage	400 VAC		
	Volt. between	changeovers	1000 VAC		
	Voltage betwee	een contacts	1000 VAC		
	Voltage	coil/contact	4000 VAC		
	Distance	coil/contact	8	mm	
	Isolatio	n resistance	> 10⁴ MΩ		

		KNCA/ KNPA
	Voltage phase-neutral	300 V
	Overvoltage category	111
	Shocking voltage	4 kV
ta	Pollution degree	2
data	Protection class	IP 20
tal	Storing temperature	-50+85°C
enviromanetal	Operating temperature	-20+50°C
Ë	Humidity	3085% HR
ž	Housing	Cycoloy - Light Grey
en	Socket	Lexan - Light Grey
B	Leds window	Lexan - Transparent
e e	Buttons and terminal blocks	Technyl - Dark Blue
ŝ	Terminals	Nickled brass
Constructive and	Norms	Designed and manufactured
nst		under EEC standards.
ပိ		Directive for electromagnetic
		compatibility 2004/108/EEC.
		Directive for low voltage
		2006/95/EEC.
		Plastics: UL 91 V0

		KNCA	/ KNPA
			CA/CC
Supply voltage			
dn	Galvani isolation	Yes	Yes
S	Frequency	50 / 60 Hz	-
	Operating margins	±1015%	-
	Positive	-	Terminal A1
	Protected polarity	-	Yes

DISIBEINT ELECTRONIC SL

Segle XX, 91 <u>____</u> E08032-Barcelona

Rev. 02/00 · 13/02/12 · DISIBEINT reserves the right to alter the content of this document without previous notice T: +34 934 330 370 F: +34 934 254 532

F: +34 934 354 532

www.disibeint.com disibeint@disibeint.com